

DT800-2AB Barometer, simple



Important note

In order to prevent damage during the transport the pointer of the barometer has been locked and needs to be unlocked before the first use.

Afterwards the barometer has to be set to the air pressure of the current location.



How to do:

Place the barometer on a non-slipping surface with the back side up.

Carefully turn the central screw clockwise with the help of the enclosed screwdriver.

First unlock the transport security by using a little force.

After two full turns to the right the pointer will start to react sensitively.

Adjust the pointer by turning the screwdriver to the left or to the right until you set it to the current air pressure value.

The current reference value can be obtained from the internet, public authorities or your local weather service.

